

## Technical Data Sheet



**HZBEV6-180**

**A.G.M. Battery**



<b>Voltage</b>	<b>6v</b>
<b>Cold cranking amps</b>	<b>1124</b>
<b>Reserve capacity 25 amps</b>	<b>375</b>
<b>Capacity @ 20 HR</b>	<b>185ah</b>
<b>Capacity @ 48 HR</b>	<b>199ah</b>
<b>Capacity @ 5 HR</b>	<b>150ah</b>
<b>Tab or Thread insert</b>	<b>Thread</b>
<b>Thread insert size (mm)</b>	<b>8mm</b>
<b>Bench charge rate</b>	<b>18amps</b>

**Dimensions (mm)      Weight (kg)**

<b>Length</b>	<b>260</b>	<b>30.2</b>
<b>Width</b>	<b>181</b>	
<b>Height</b>	<b>246</b>	

To ensure maximum cycle life it is important to ensure the battery is fully re-charged as soon as possible after use.

The following is a guide to the number of cycles that can be expected.

100% D.O.D = 270 cycles: 75% D.O.D = 350 cycles 50% D.O.D = 550 cycles.